

FE Commercial 4/6 Slice Electric Toaster FETS4/6

Manual



Notice

Before using this product, please read this manual carefully and follow the steps below:

- Before use, please carefully check whether the technical parameters (such as frequency, voltage, etc.) of the product manual meet the local electricity requirements.
- Do not place this product in a humid, heat source, flammable, dusty place to avoid damage. It should be placed on a table or a flat, clean place. Do not immerse the grinder or power cord plug in water or other liquids.
- This product is not intended for use by children, persons with reduced physical, sensory or mental capabilities, and persons lacking experience and knowledge of the product; and should be supervised when using this product.
- When using this product, if there is smoke, sparks, abnormal smell or noise, you should immediately turn off the power switch and stop using it.
- When this product is working, do not plug or unplug the power plug with wet hands, or wipe the electrical appliance with a damp cloth.
- When this product fails, it must be repaired by the manufacturer or professional maintenance personnel, do not dismantle the machine.
- When cleaning the product or disassembling and assembling various parts of the product, please be sure to unplug the power plug to ensure that the machine is in a stopped state, so as to avoid the danger of accidentally touching the switch.
- After using this product, please cut off the power supply.

Please save this manual after reading it for future reference.

This product has passed the national mandatory CCC certification.
Executive standard: GB4706.1-2005. "GB4706.30-2008



Heavy duty all stainless steel construction and efficient heating element, suitable for a busy café, restaurant or staff room. Electronic controls, Carriage control lift lever.

Specification

Model	FETS4	FETS6
Dimensions (WxDxH)mm	295x215x215	435x215x220
Slice (pc)	2 or 4	2 or 4 or 6
Weight	4kg	6kg
Voltage	220v / 50hz	220v / 50hz
Power	1800w, 10A	2500w, 15A
Timer	0-5min	0-5min

Use and Care

Operation:

Insert the power socket, put the slices of bread into the bread toasting slot, adjust the timer knob, set the heating time (the indicator light is on at this time), the toaster will heat up according to the time, when you hear a "ding" bell, the toaster has completed the heating time of the slices of bread. Then press down manual lever raise the slices of bread. To select the slices of bread to be toasted each time, pressing the switch to 2PC or 4PC. The browning level can be adjusted with the timer control knob, longer means darker.

Precautions:

- The areas surrounding the bread slots become very hot during use: operating the toaster should be carried out touching only the plastic controls.
- Bread is a food stuff which may catch fire. And do not use this appliance under or next to textiles or other combustible material.
- Do not cover the appliance while it is in use.
- Never warm food with a topping or filling (pizza). Drips in toaster could catch fire.
- Clean the crumb tray regularly. Crumbs can smoke, burn or jam.
- Never use the appliance when it is empty (except on first use)
- Do not insert foods that are too big for the slots
- Do not insert forks or other utensils into the toaster to remove bread, high risk of electric shock.

Cleaning:

- Before cleaning, unplug your toaster and let it cool down.
- The external part of the appliance must be cleaned with a soft cloth. Do not use abrasive detergents that can ruin the surface.
- Do not immerse in water.
- After each use, remove the plug from the electrical outlet and empty the crumb collection tray that is under the appliance.

Warranty Card

Thank you for using this product, from the date of purchase, enjoy a free one-year warranty service.

Please fill in and properly keep the product warranty card and purchase receipt as a basis for maintenance.

Disclaimer: The following cases will not provide after-sales protection

- Failure to operate as required by the instruction manual caused the failure.
- Damaged by improper use or disassembled by yourself.
- Damage caused by force majeure.
- Products that cannot provide purchase transaction information.
- The warranty card is incomplete and does not have a dealer stamp.

Product Model:	
Dealer:	
User Name	
Address:	
Contact Number :	
Product No.:	
Date of purchase:	